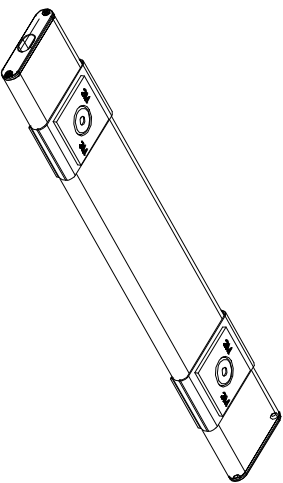
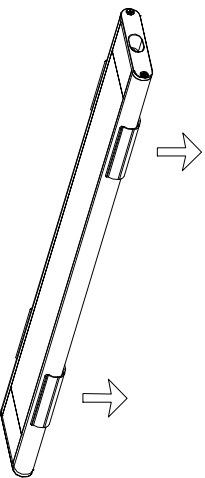
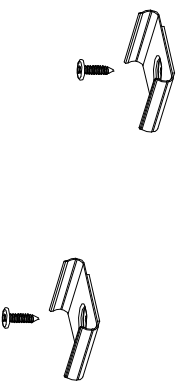
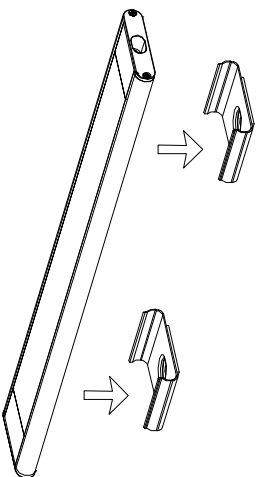
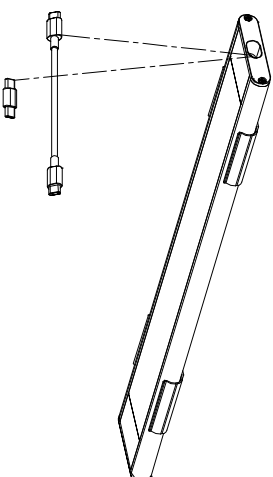
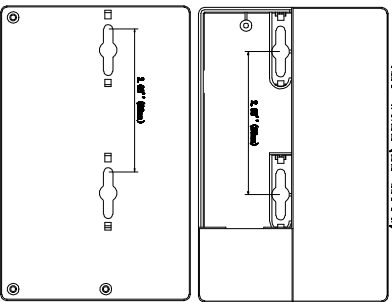
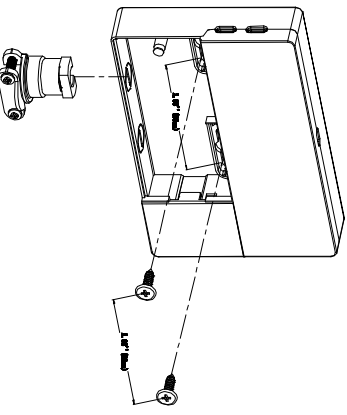
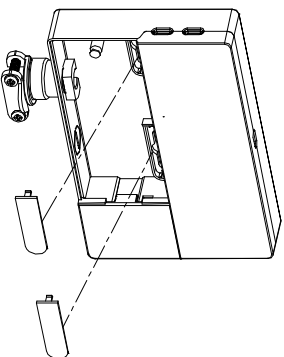
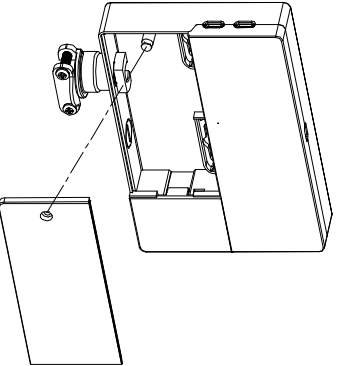
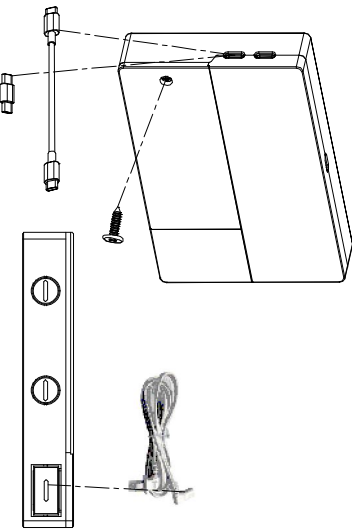


# LED module installation

<p>Step 1: Temporarily attach the mounting brackets to the LED modules. Remove the 3M backing.</p> 	<p>Step 2: Press and hold the LED modules for 10 seconds in their intended final position under the cabinet. 2.1 Temporarily remove the LED modules from their brackets which will remain in place under the cabinet.</p> 	<p>Step 3: Pre-drill into the button of the cabinet through the centered screw holes in the brackets approx. 3/8" - 1/2" deep, being mindful not to drill completely through the cabinet. 3.1 Install the screws into the predrilled holes to reinforce the brackets.</p> 	<p>Step 4 : Reinstall the LED module into the brackets.</p> 	<p>Step 5, Connect the USB-C cable.</p> 
--	--	---	---	---

# Jbox driver installation (wire and plug)

<p>Step 1: follow the size below drill the hole on the wall (if need)</p> 	<p>Step 2: knock off the knockout hole, assemble the conduit fitting on the box, install the screw on the wall then hang the driver box on the screw</p> 	<p>Step 3 : put back those two small plate cover the screw hole.</p> 	<p>Step 4: put back the box cover after finish wire connection</p> 	<p>Step 5: then install the screw, connect the cable from the output socket to the modules, knock off the square knock hole for the plug, then connect the plug.</p> 
--	---	---	---	--